

## IMPORTANT

1. This "Volga" car Service Manual with a diesel Indenor engine is a supplement to the main Gorky Automobile Works Service Manual for "Volga" GAZ-24 car with a petrol engine.

2. Keep clean the diesel engine during operation, especially when filling the car with fuel. Dirt and water will cause a failure of the fuel supply system.

3. Do not allow all of the fuel to be used to prevent air from entering into the fuel system as this will require bleeding of the fuel system after filling the tank.

4. The cooling system is filled with a lowfreezing TOSOL A-40 liquid and equipped with an expansion tank.

5. Switch off electric equipment instruments only after the car is fully stopped to prevent an accidental locking of the steering gear on the move which will cause loss of driving control and damage.

6. During maintenance and the diesel engine adjustment use the CLM instructions.

### SPECIFICATIONS OF "VOLGA" CAR WITH DIESEL ENGINE

The GAZ-24-56 is a medium-class car. It has room for 5 passengers (including the driver).

Model	GAZ-24-56
Dry weight, kg	1410
Maximum speed, km/hr	125
Engine	Peugeot diesel engine
Engine model	Indenor 4.90
Number of cylinders, displacement, lit	4-2.112
Power, DIN, hp at rpm	62/4.500
Storage battery, Ahr	75