

### Adjustment Data

The GAZ-24-56 car tyre pressure, kgf/cm<sup>2</sup>:

normal

1.8-1.9

at high speed operation

2.0-2.1

Engine cooling system capacity

filled with TOSOL A-40 liquid, lit

11.5

All the other specifications of the car are described in the Service Manual for the "Volga" GAZ-24 car.

### PECULIARITIES OF CAR MAINTENANCE

#### Filling of the Car with Fuel and Oil

For filling the car use diesel fuel and motor diesel oil recommended by the supplier who sold you the car.

Be sure to prevent water, gasoline and dirt from penetrating into the fuel tank. If it happens, empty the tank. Clean the tank, filter and fuel pipes to avoid the damage of the fuel pump and the engine. Prime the tank with clean fuel and bleed the fuel system.

#### Fuel Filter Bleeding

To evacuate air from the fuel system bleed the fuel filter in the following order:

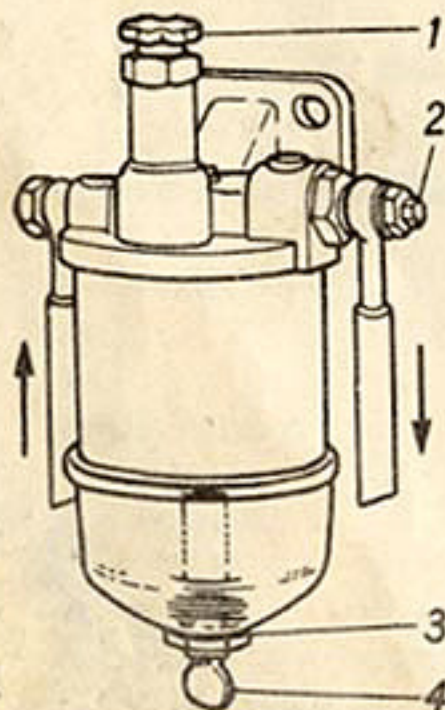


Fig. 1. Roto-diesel sediment bulb:

1 - pump head; 2 - screw-plug;  
3 - nut; 4 - drain screw