



**Fig. 2. Instrument panel and controls of car with diesel engine:**

1 - fuel feed switch handle; 2 - air supply-adjusting handle; 3 - gate handle; 4 - cowl ventilation cover handle; 5 - central light switch; 6 - emergency signalling system switch; 7 - electric equipment instruments and starter switch and anti-theft lock; 8 - windscreen wiper and windscreen sprinkler switch; 9 - fan switch; 10 - idle fuel feed hand control lever; 11 - parking light switch; 12 - accelerator pedal; 13 - service brakes pedal; 14 - clutch pedal; 15 - foot operated light switch; 16 - parking brake handle; 17 - gear shift lever; 18 - glow plugs button; 19 - glow plugs heating pilot coil; 20 - cigar lighter

If the engine does not start, switch on the glow plugs and starter again. Never turn the starter motor longer than 10-15 sec.

After the engine has started allow it to warm up for some minutes and at the same time gradually return lever 10 in its initial position turning it counterclockwise.